


SRX NAT64

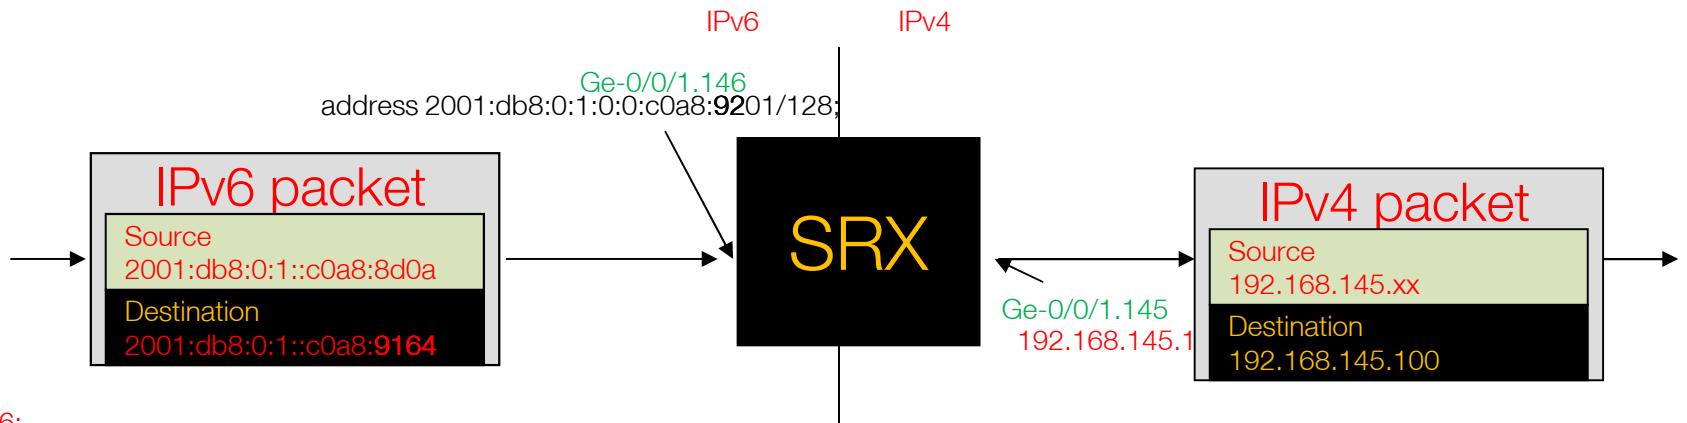

Source IPv6:
2001:db8:0:1::c0a8:920a

destination IPv4:
192.168.145.100 -> Hex: c0a8:9164

- ✓ Static NAT on Untrust side
- ✓ Source NAT with persistence
- ✓ Proxy ARP

Activate IPv6 Flow Mode

```
admin@SRX3400# configure private  
admin@SRX3400# show security forwarding-options  
family {  
    inet6 {  
        mode flow-based;  
    }  
}
```

Configuring Interfaces

```
admin@SRX3400# edit logical-systems Trust-Isys-ipv6
[edit logical-systems Trust-Isys-ipv6 interfaces ge-0/0/1 unit 146] #show
ge-0/0/1{
    unit 145 {
        description "Interface towards IPv4 side";
        vlan-id 145;
        family inet {
            address 192.168.145.1/24;
        }
    }
    unit 146 {
        description "Interface Towards IPv6 side";
        vlan-id 146;
        family inet {
            address 192.168.146.1/24;
        }
        family inet6 {
            address 2001:db6:0:1::c0a8:9201/64;
        }
    }
}
```

Configuring security zones

```
security {
    zones {
        security-zone Untrust-ipv6 {
            address-book {
                address hostv6 2001:db7:0:1::c0a8:920c/128;
            }
            interfaces {
                ge-0/0/1.146 {
                    host-inbound-traffic {
                        system-services {
                            all;
                        }
                        protocols {
                            all;
                        }
                    }
                }
            }
        }
        security-zone Trust-ipv4 {
            address-book {
                address serverv4 192.168.145.100/32;
            }
            interfaces {
                ge-0/0/1.145 {
                    host-inbound-traffic {
                        system-services {
                            all;
                        }
                        protocols {
                            all;
                        }
                    }
                }
            }
        }
    }
}
```

Configuring a Security Policy from zone Untrust to zone Trust

```
admin@SRX3400#  
[edit logical-systems Trust-lsys-ipv6 security]  
policies {  
    from-zone Untrust-ipv6 to-zone Trust-ipv4 {  
        policy client6server4 {  
            match {  
                source-address hostv6;  
                destination-address serverv4;  
                application any;  
            }  
            then {  
                permit;  
                log {  
                    session-init;  
                    session-close;  
                }  
            }  
        }  
    }  
}
```

Configuring Static NAT for server

- Traffic is coming from the client on the **untrust** zone
- NAT server 192.168.145.100 (real IP configured on server) IPv4 address to the IPv6 2001:db6:0:1::c0a8:9264 address

```
security {
    nat {
        static {
            rule-set static64 {
                from zone Untrust-ipv6;
                rule toipv4 {
                    match {
                        destination-address 2001:db6:0:1::c0a8:9164/128;           // equivalent of 192.168.145.100
                    }
                    then {
                        static-nat prefix 192.168.145.120/32;           // source will be 192.168.145.120
                    }
                }
            }
        }
    }
}
```

Static NAT – Checking configuration

- `admin@SRX3400# run show security flow session`
- **NOTHING**

Configuring Source NAT for client

- Configure Source NAT for Client
 - Traffic is coming from the client on the Untrust zone going to the server on the Trust zone
 - NAT Client's 2001:db6:: IPv6 address to the IPv4 address

```
admin@SRX3400# show logical-systems Trust-lsys-ipv6 security nat
```

```
source {
    pool cs64-pool {
        address {
            192.168.145.8/32;
        }
    }
    rule-set client6-rs {
        from zone Untrust-ipv6;
        to zone Trust-ipv4;
        rule client64-rule {
            match {
                source-address 2001:db6:0:1::c0a8:920a/128;
                destination-address 192.168.145.100/32;
            }
            then {
                source-nat {
                    pool {
                        cs64-pool;
                        persistent-nat {
                            permit any-remote-host;
                        }
                    }
                }
            }
        }
    }
}
```