



Schema:

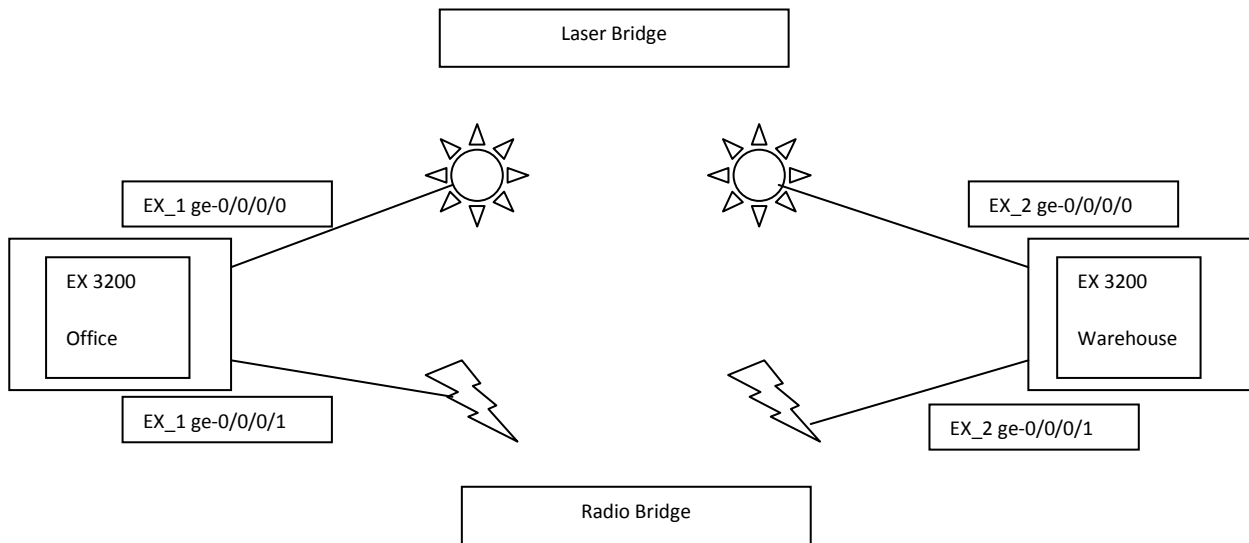


Test 1:

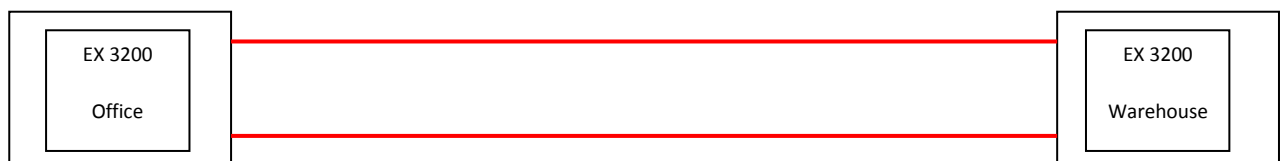

When i disconnect one red cable the RTG protocol working fine (and so on the preference)

Test 2: (trouble)

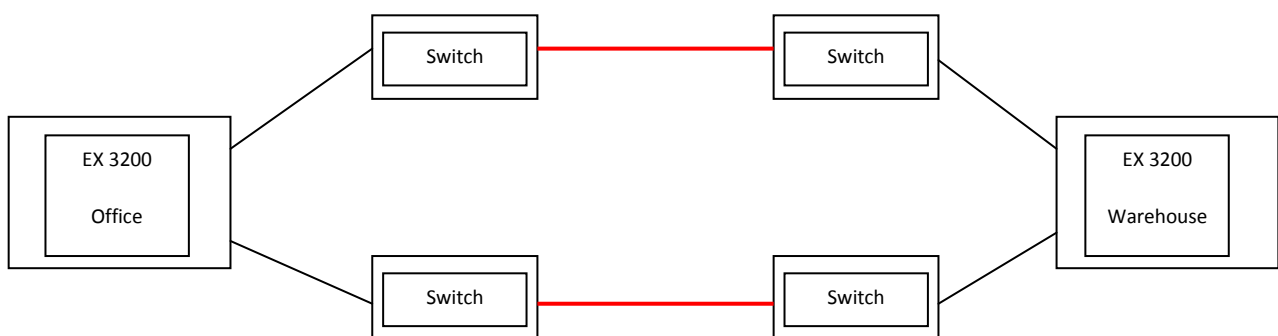

When I disconnect a red cable the link on the ge-0/0/x interface stay up and the RTG protocol do not work.

Someone can help me ?

Thanks in advance. (Paolo Vegetti)